




WI-FI GUIDE OPERATION

DOWNLOAD THE APP FROM THE APP
STORE AND INSTALL

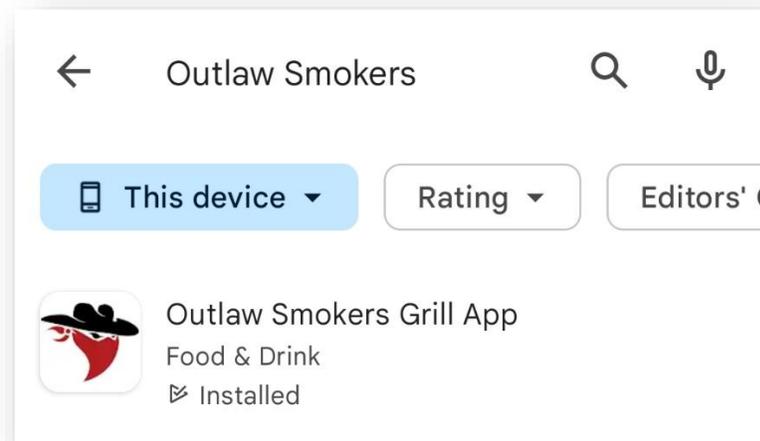

LOCATE SETTINGS

Open the app. Touch the Gear icon in the top right corner.






WI-FI GUIDE

OPERATION

SELECT “SET UP GRILL (ACCESS POINT)”

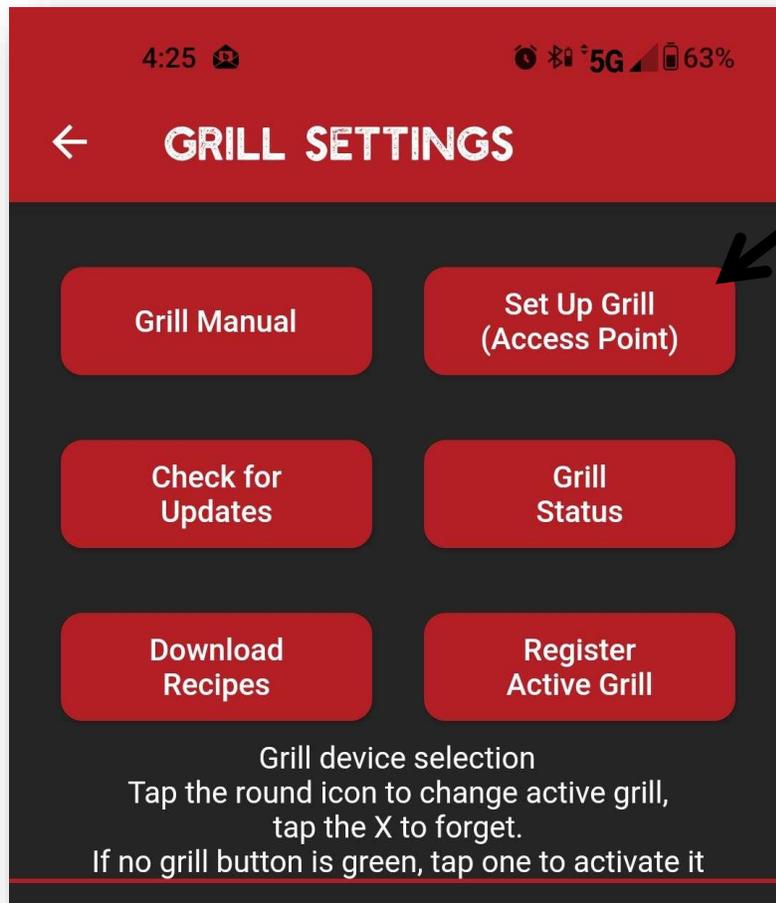




WI-FI GUIDE

OPERATION

On your phone, go to your WiFi settings and you should see a new network named APSetup_xxxx

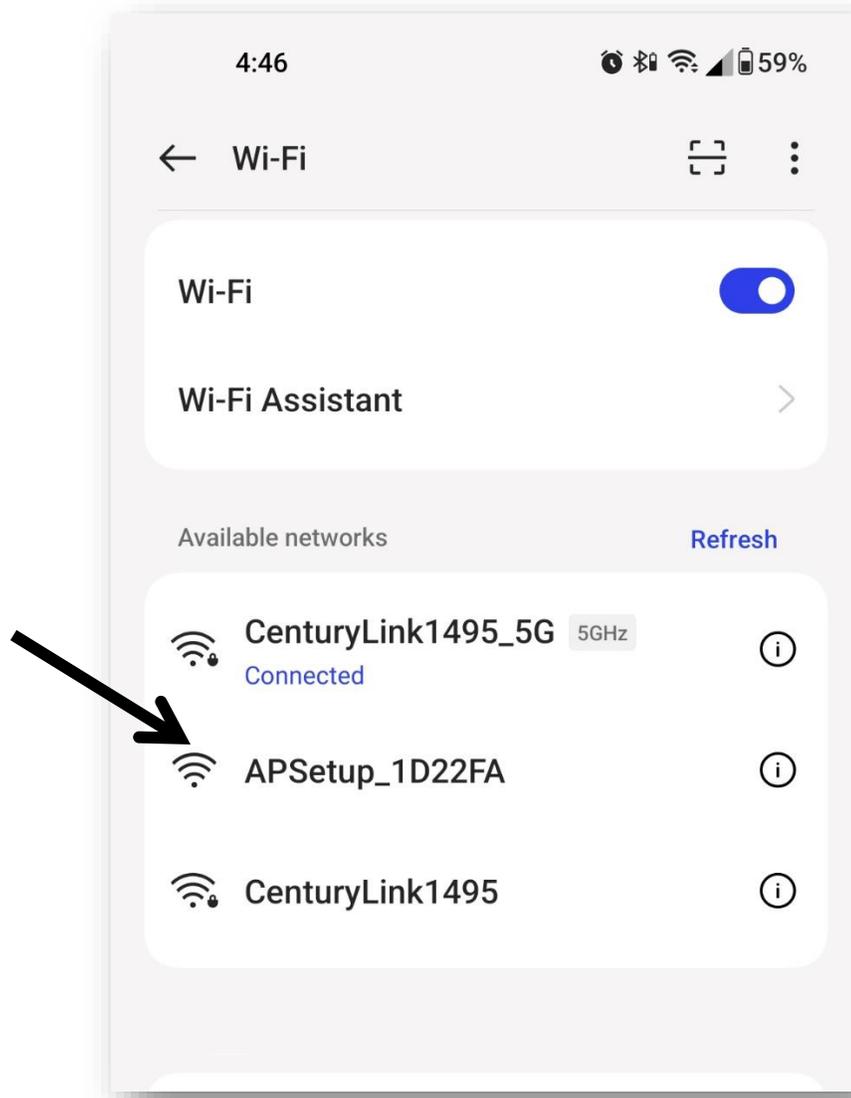




WI-FI GUIDE

OPERATION

Tap the APSetup_XXXX to join the network.
Then return to the app and press the
“Connect AP” button below.

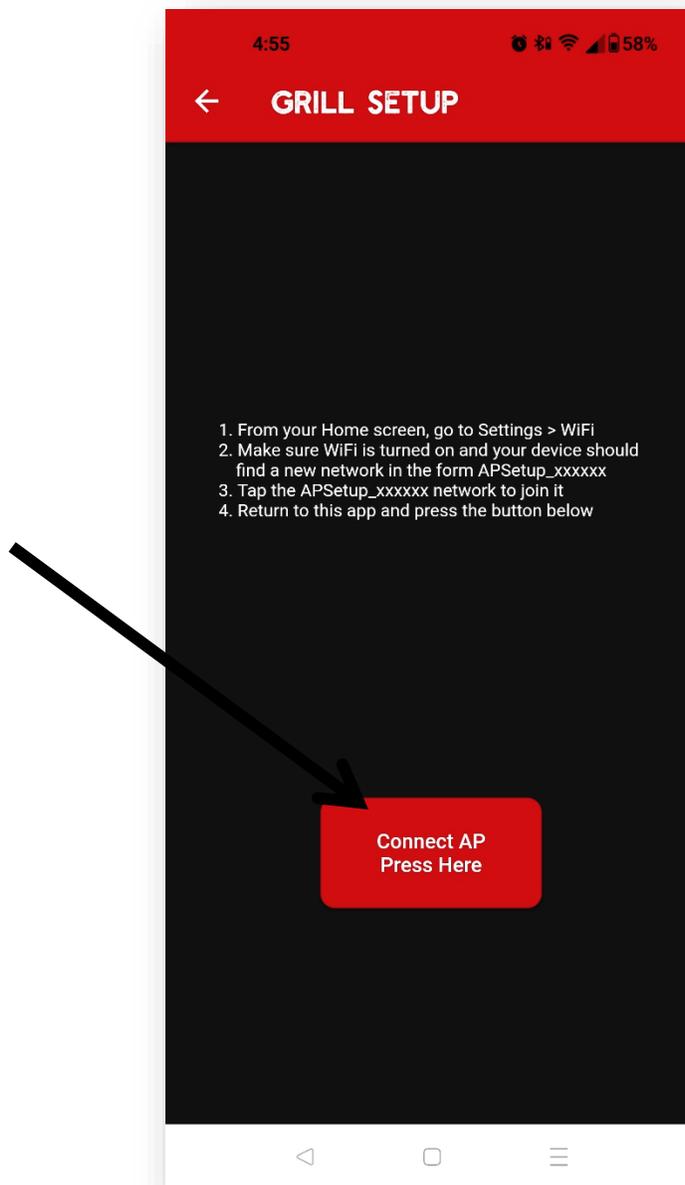



WI-FI GUIDE OPERATION

Just a moment. Your grill is thinking...

When you click the “Connect AP Press Here” button, it can take up to 5 minutes to connect.



If nothing happens after a full 5 minutes, quit the app and restart these steps. If you are still having trouble, try deleting and re-downloading the app.


The grill must connect to a 2.4GHz network, not a 5G.

If you have an EERO network, follow the steps at the end of this guide.



WI-FI GUIDE OPERATION

Select your network from the list (make sure you select the 2GHz network connection) then enter your WiFi password.

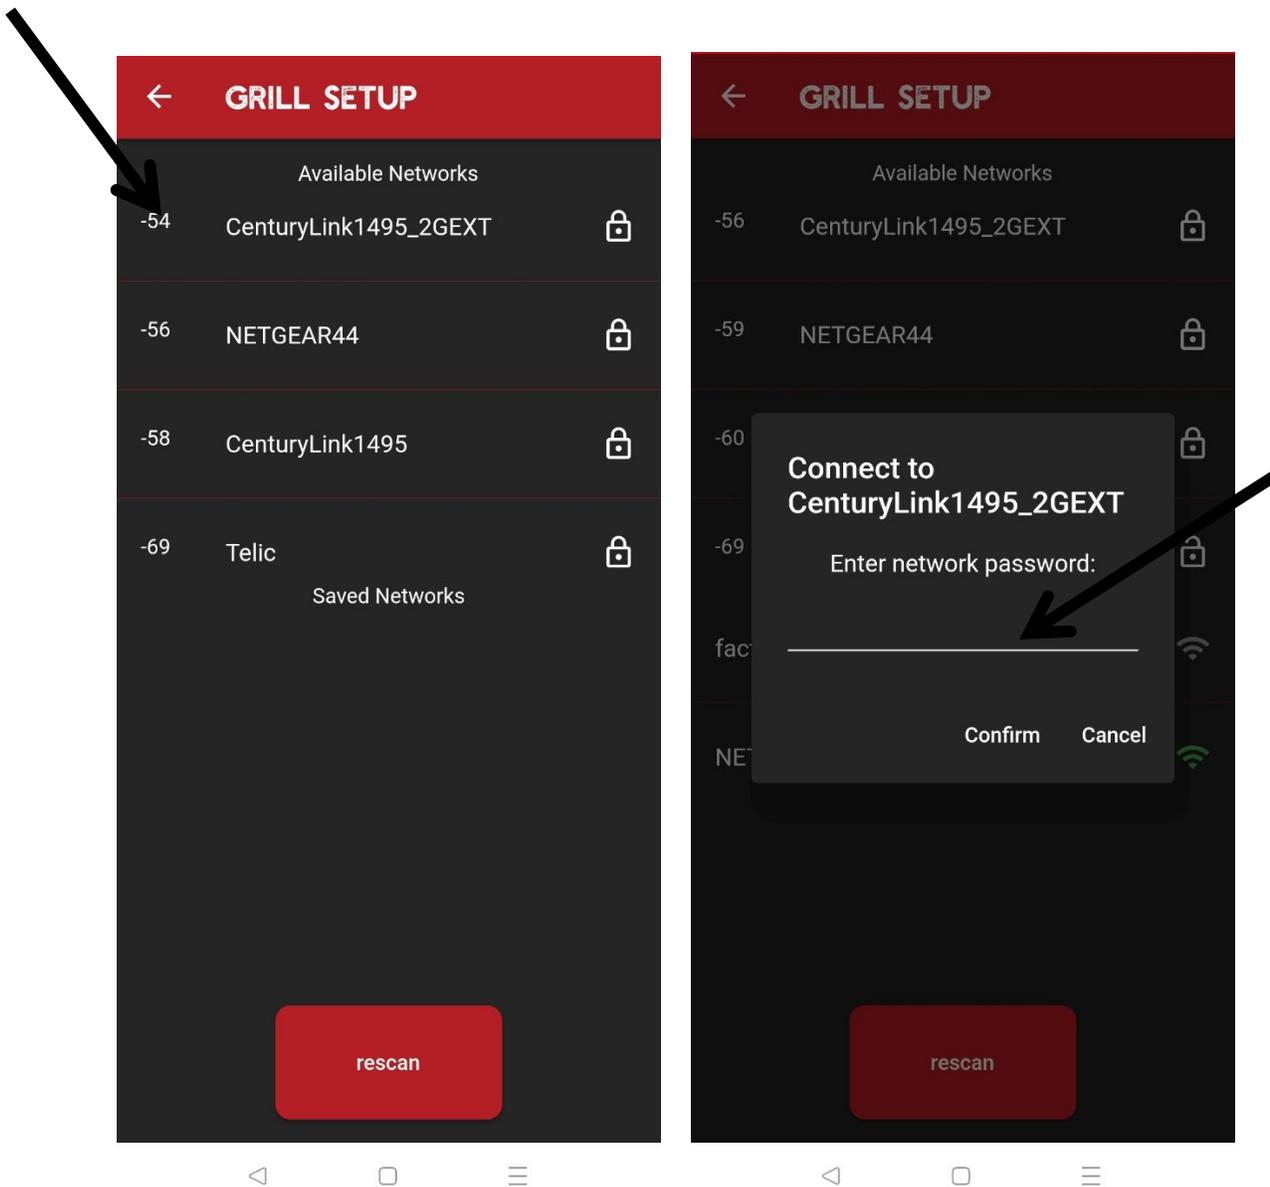




WI-FI GUIDE

OPERATION


Enter your grill name of choice

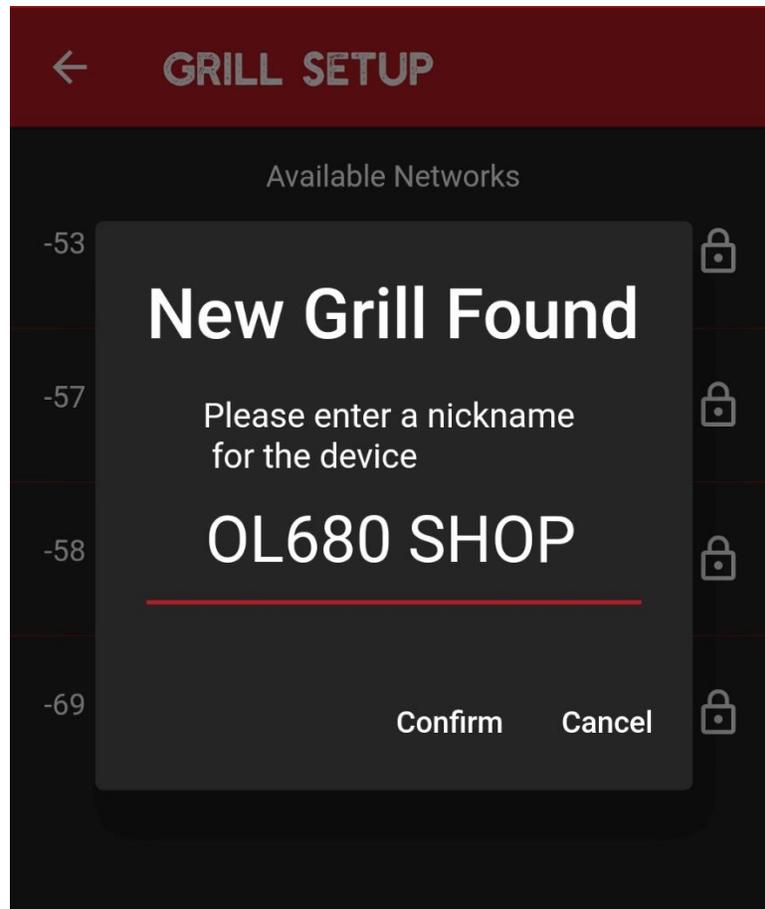

After you name your grill, then go back to your phone's WiFi settings and connect to your home WiFi network.

(This should happen automatically, but on the off-chance that it doesn't, making sure you are connected to your WiFi Network will solve the issue if it's not connecting)


Select your device under the Grill device selection then press the back arrow.

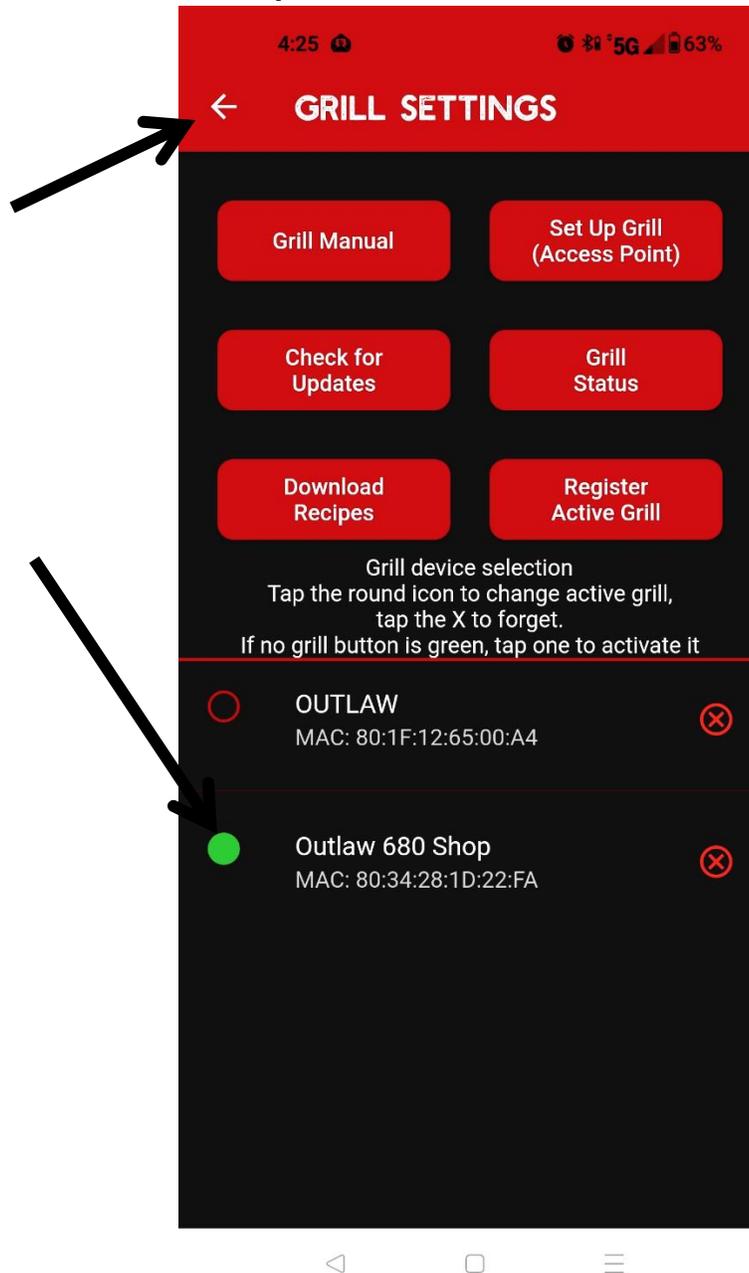



WI-FI GUIDE OPERATION

If your grill is turned on, this is your home screen. You're ready to cook!

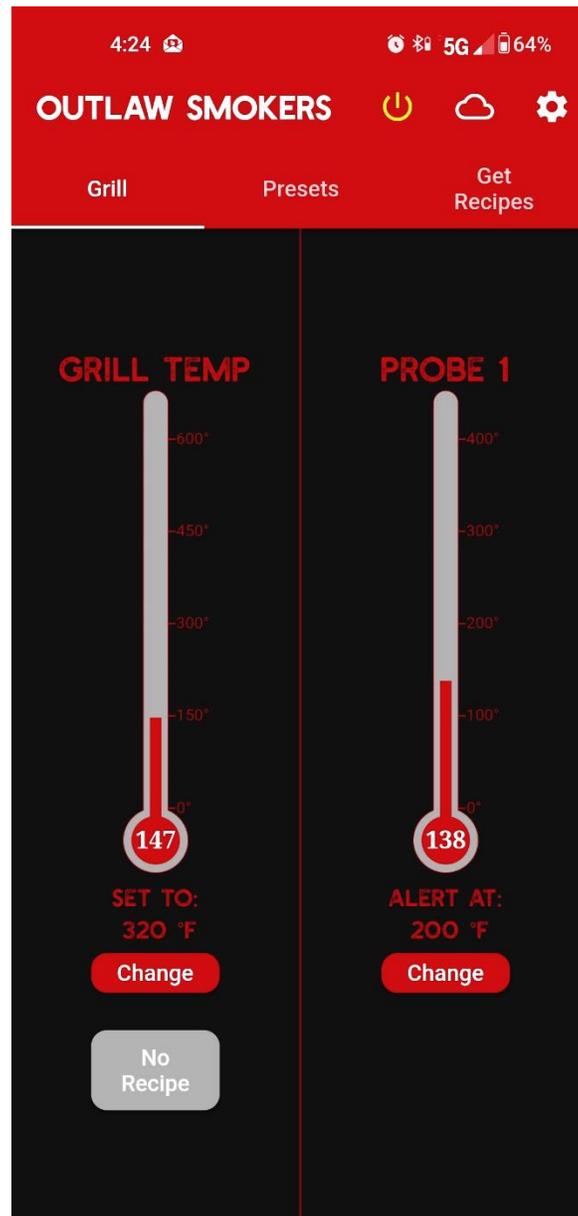



WI-FI GUIDE

OPERATION

EERO TROUBLESHOOTING

EERO Customer Support recommends these DHCP Modifications.

